


# INSTRUCTIONS FOR


## Car Window Decals




**Step 1.** Clean the area thoroughly with soap and water. Do not use Windex or similar products because it will leave a residue behind that will prevent the decal from adhering properly.

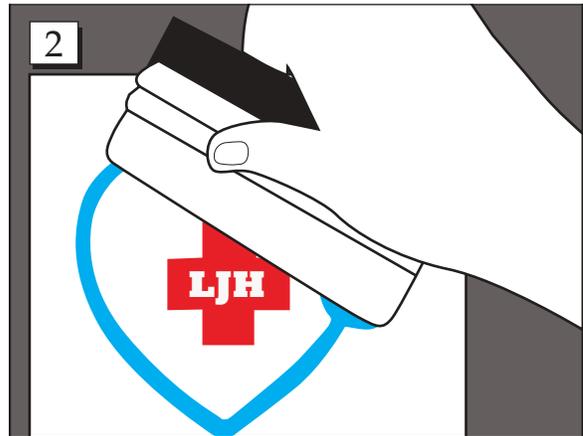


**Step 2.** Prepare the decal by firmly rubbing a squeegee or credit card across the clear transfer tape. This removes any air bubbles that may have formed and makes the decal cling to the transfer tape.

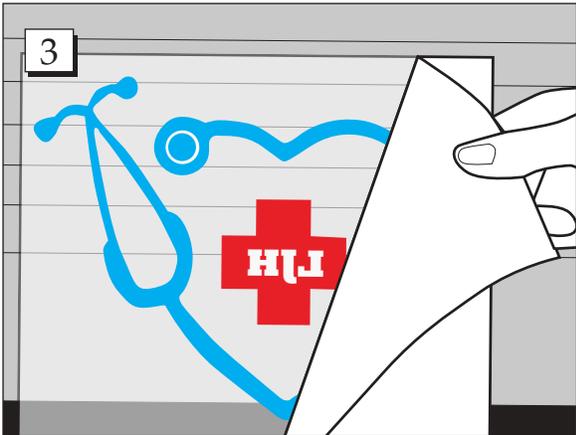

**Step 3.** Peel the paper backing from the decal.

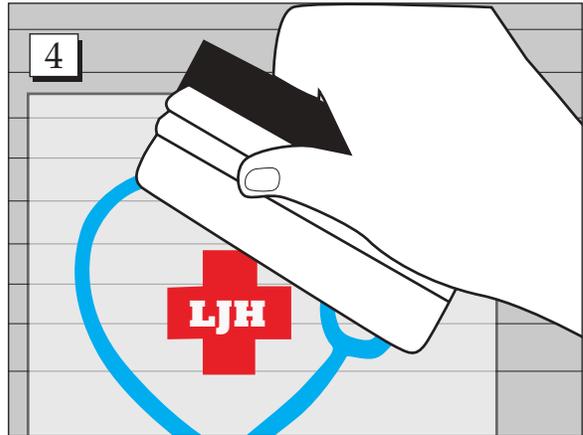

**Step 4.** Slowly lower the decal onto the surface and rub it in place firmly with the squeegee or credit card.

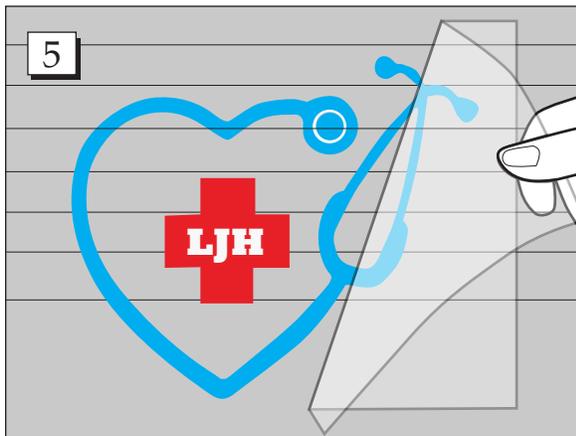

**Step 5.** Slowly peel the clear transfer tape off at an angle. Be careful not to peel the decal off the surface. If the decal pulls away from the surface repeat step 4.