


# ASSEMBLY INSTRUCTIONS FOR

## Double-Sided Easy Shelving (#5051)

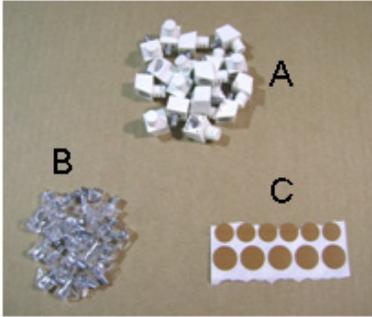

Front Shelf Blocks (A),  
Back Shelf Pins (B) and Shelf Hole  
Covers (C) - two of each will be  
needed for each shelf.



22 Shelves



Top, Bottom and 2 Toe Panels

**Each component is labeled to assist in  
the assembly process.**



Center Divider



Left and Right Sides

**Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923**  
Website: [www.HealthCareLogistics.com](http://www.HealthCareLogistics.com) • Email: [hcl@HealthCareLogistics.com](mailto:hcl@HealthCareLogistics.com)

# ASSEMBLY INSTRUCTIONS FOR

## Double-Sided Easy Shelving (#5051)



**Step 1.** Assemble a Toe Panel to the Bottom Panel by aligning the holes and setting the Toe Panel in place - both labels should be visible as shown.



**Step 2.** Press the two fitting toggles down as shown to lock the toe panel in place.



**Step 3.** Repeat steps 1 and 2 to attach the second Toe Panel on the opposite side of the Bottom Panel.



**Step 4.** Lay the center divider down with the labels facing up as shown.

Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923  
Website: [www.HealthCareLogistics.com](http://www.HealthCareLogistics.com) • Email: [hcl@HealthCareLogistics.com](mailto:hcl@HealthCareLogistics.com)

# ASSEMBLY INSTRUCTIONS FOR

## Double-Sided Easy Shelving (#5051)



**Step 5.** With a helper, turn the center divider onto its side as shown - labels forward as shown.



**Step 6.** Attach the Bottom Panel to the Center Divider as shown - labels forward as shown.



**Step 7.** Press the three fitting toggles down to secure.



**Step 8.** Attach the Top Panel to the Center Divider opposite the Toe Panel Bottom as shown - label on the same side as shown.

**Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923**  
Website: [www.HealthCareLogistics.com](http://www.HealthCareLogistics.com) • Email: [hcl@HealthCareLogistics.com](mailto:hcl@HealthCareLogistics.com)

# ASSEMBLY INSTRUCTIONS FOR

## Double-Sided Easy Shelving (#5051)



**Step 9.** Press the three toggle fittings down to secure.



**Step 10.** Attach the Right Side Panel to the Center Divider as shown - NOTE: make sure the label is on the same side as pictured.



**Step 11.** Press the four fitting toggles down - the other is on the side of the Center Divider. The other two are on the opposite end.



**Step 12.** With a helper, flip the unit over as shown.

**Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923**  
Website: [www.HealthCareLogistics.com](http://www.HealthCareLogistics.com) • Email: [hcl@HealthCareLogistics.com](mailto:hcl@HealthCareLogistics.com)

# ASSEMBLY INSTRUCTIONS FOR

## Double-Sided Easy Shelving (#5051)



**Step 13.** Attach the Left Side as shown with the label facing forward - NOTE: all the labels should be on the same side.



**Step 14.** Press the four fitting toggles down as shown - the other is on the other side of the Center Divider. The other two are on the opposite end.



**Step 15.** Make sure all of the fitting toggles are pressed down prior to the next step.



**Step 16.** With a helper, move the unit upright with the Toe Panels on the floor.

### SHELF INSTALLATION



Flat Lip Up

Flat Lip Down

Tilted Down

Tilted Up

**Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923**  
Website: [www.HealthCareLogistics.com](http://www.HealthCareLogistics.com) • Email: [hcl@HealthCareLogistics.com](mailto:hcl@HealthCareLogistics.com)

# ASSEMBLY INSTRUCTIONS FOR

## Double-Sided Easy Shelving (#5051)



**Step 17.** Decide the positioning of your shelves. Each shelf is adjustable in 1/4" increments and can be tilted up or down by using a different level of holes in the back. Insert the clear plastic shelf pin in the back hole at your desired height.



**Step 18.** Once the clear back shelf pins are in place, insert the front white shelf blocks into the front shelf holes and tighten with a Phillips screwdriver. Repeat steps 17 and 18 on the opposite side.



**Step 19.** Position the shelf on the clear back shelf pins. Make sure the white front shelf blocks line up with the holes in the shelf and LIGHTLY tap on the front of the shelf to slide onto blocks.



**Step 20.** Place the shelf hole covers over the holes.

**Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923**  
Website: [www.HealthCareLogistics.com](http://www.HealthCareLogistics.com) • Email: [hcl@HealthCareLogistics.com](mailto:hcl@HealthCareLogistics.com)