


INSTRUCTIONS FOR HCL® LUD Press for HCL® Tamper Tuf™ Vials w/ Caps (#18737)




Step 1. Place the vials into the holder openings.

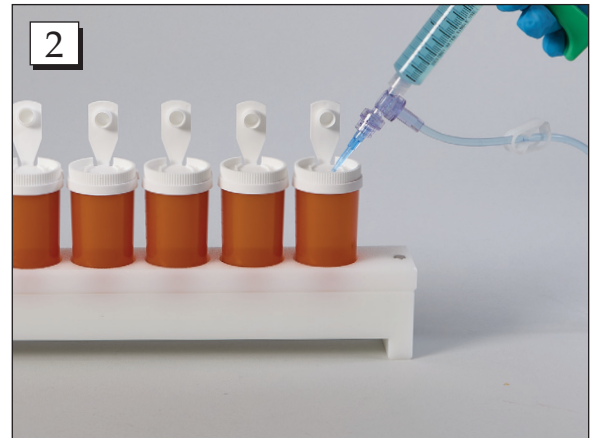

Step 2. Start at one end of the holder and fill the first vial. Continue from one vial to the next until all are filled.



Step 3. Remove the adapter from the side of the unit and install it into the press.

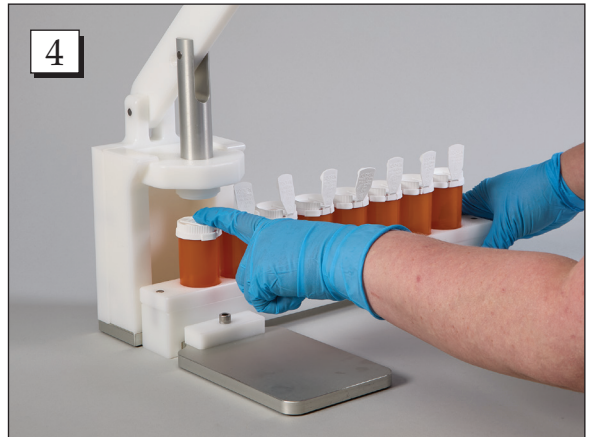

Step 4. Slide the holder into the channel base of the HCL® LUD Press, making sure the tabs are facing away from the press. Using your finger, push down the tab on the vial about to be sealed.



Step 5. Position the tab under the press and push down until you hear the tab snap closed.



Step 6. Slide the holder forward to the next vial.

HCL® Tamper Tuf™ Vials w/ Caps sold separately
HCL® Tamper Tuf™ Vials w/ Caps, 15mL #7748-Unassembled, #7741-Assembled
HCL® Tamper Tuf™ Vials w/ Caps, 30mL #7749-Unassembled, #7743-Assembled

Call Free: 1.800.848.1633 • Fax Free: 1.800.447.2923
GoHCL.com • hcl@GoHCL.com