

INSTRUCTIONS FOR

Locking Key Storage Boxes (#10430, 10431, 10432)

NOTE: Be sure to select the appropriate mounting hardware to ensure safe and reliable use. Mount hardware through a stud, blocking or rigid structure where possible during installation.




1. Push the open button down to release the front cover of the Locking Key Storage Box.



2. Decide upon your mounting location and place the Storage Box on the wall by mounting it to studs or using proper hardware.



3. Secure the Locking Key Storage Box with the four screws provided into the wall.

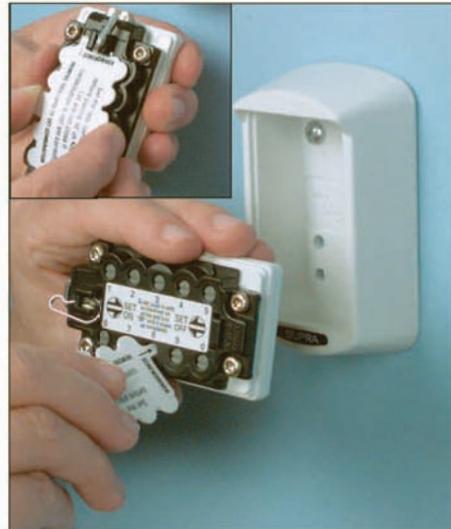

4. Remove the white card from the back of the front door and use the pointed edge of the front door to set your combination. **Holding the combination pad in the horizontal position**, set the combination by turning the desired numbered push buttons clockwise to the on position.

Instructions for releasing the black loop on the 10429 box


1. Remove the cover
2. Firmly pull up on the lift bar inside the box to release the handle

Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923

Website: www.HealthCareLogistics.com • Email: hcl@HealthCareLogistics.com

INSTRUCTIONS FOR

Locking Key Storage Boxes (#10430, 10431, 10432)

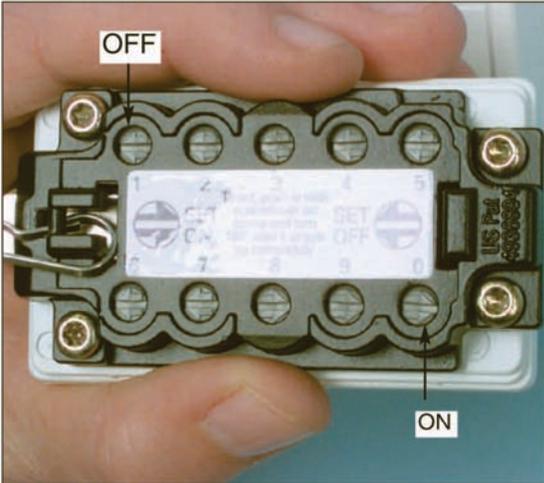

5. The combination is now set this can be verified by looking at the arrows that are pointed to the right.



6. Position the card onto the back of the front cover of the Locking Key Storage Box for future use.



7. Attach your keys to the key ring or insert them into the box.



8. Try the combination before the front cover is put back on the Key Storage Box to make sure the box will open.

Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923
Website: www.HealthCareLogistics.com • Email: hcl@HealthCareLogistics.com

INSTRUCTIONS FOR

Locking Key Storage Boxes (#10430, 10431, 10432)



9. Press the open button down and snap the front cover back onto the box.



10. The Locking Key Storage Box is now ready for use.

Call Free 1.800.848.1633 or 1.888.HCL-INTL Fax Free 1.800.447.2923
Website: www.HealthCareLogistics.com • Email: hcl@HealthCareLogistics.com