



# INSTRUCTIONS FOR APPLYING LABELS AND SEALING ROUND UNIT DOSE BLISTERS USING The #6464 Foam Sealing Tray




**Step 1.** Prepare the labels that will be applied to the blisters with the pertinent information, such as name of drug, expiration date, barcode, lot number, etc.

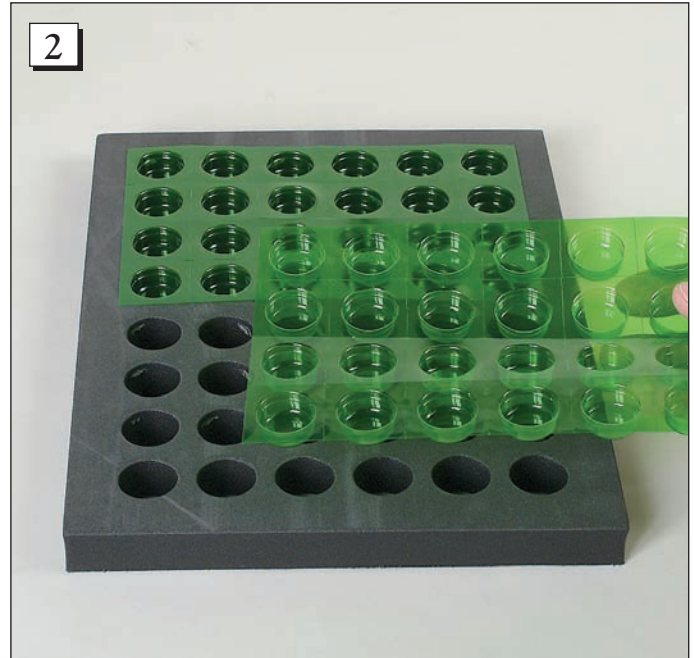


**Step 2.** Remove two 4 x 6 grids of blisters from the blister stack and place in the sealing tray.

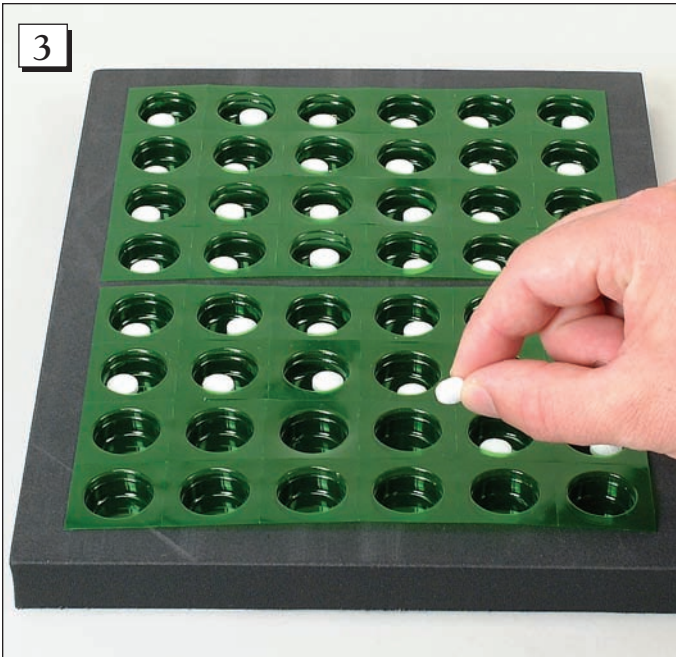

**Step 3.** Fill each blister cavity.

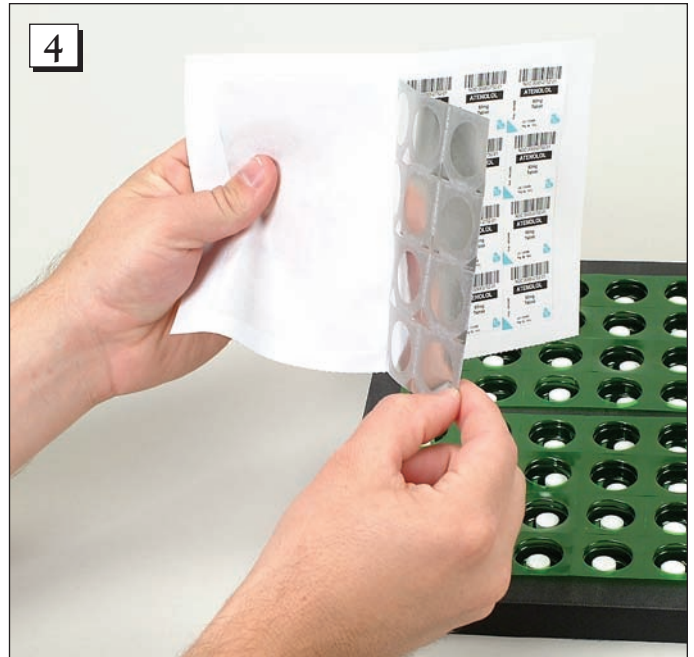


**Step 4.** Peel a grid of labels from the 8½ x 11 sheet of laser labels.

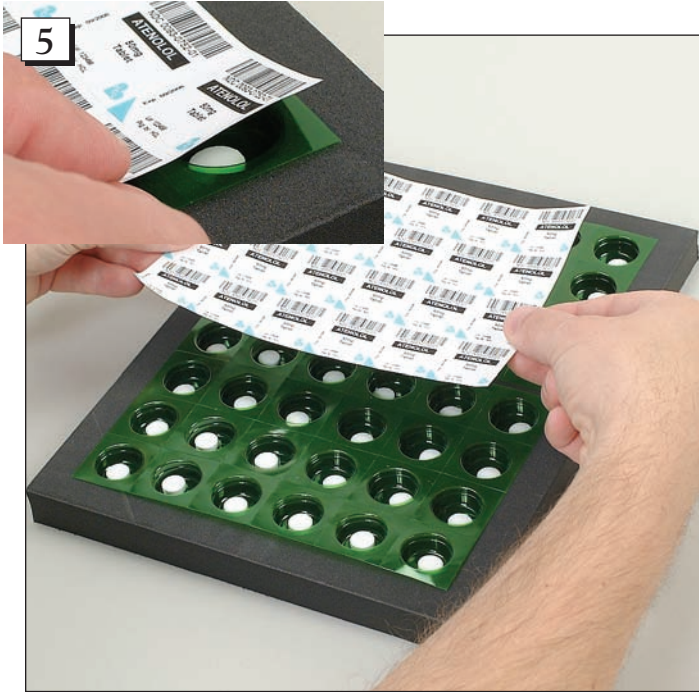


**Step 5.** Holding the label grid by the edges on either side, apply the to a grid of blisters in the sealing tray by matching the adhesive on the labels with the edges of the blisters. Repeat steps 4-5 for the second grid in the tray.



**Step 6.** Using a circular motion with your hand, press the labels onto the blisters.

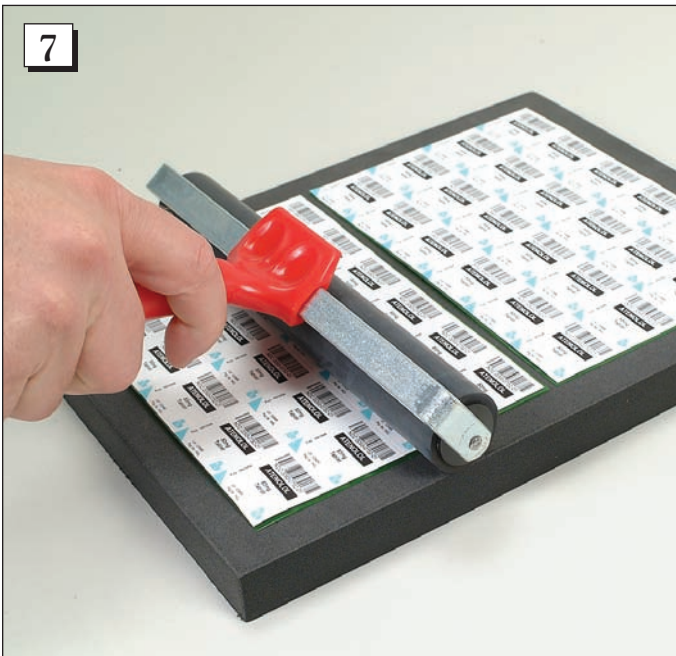

**Step 7.** Enhance the seal by applying moderate pressure to the sealed blister grids using a sealing roller. Smooth the labels along the entire length of the blister tray.

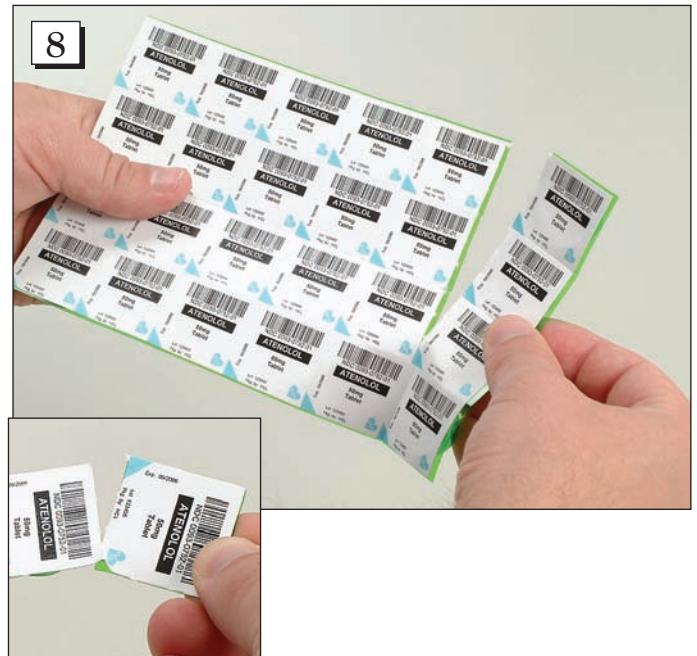

**Step 8.** Tear apart the strips at the perforations and then the individual blisters. Store or dispense.